


2) PLACE YOUR CABINETS




DESIGN PROCESS

- Start your design by placing Appliances and Sink Bases first, then start placing cabinets outward from the corners.
- Remember to leave 1-3" at the end of runs for fillers. These items allow for clearances for drawers and hardware.

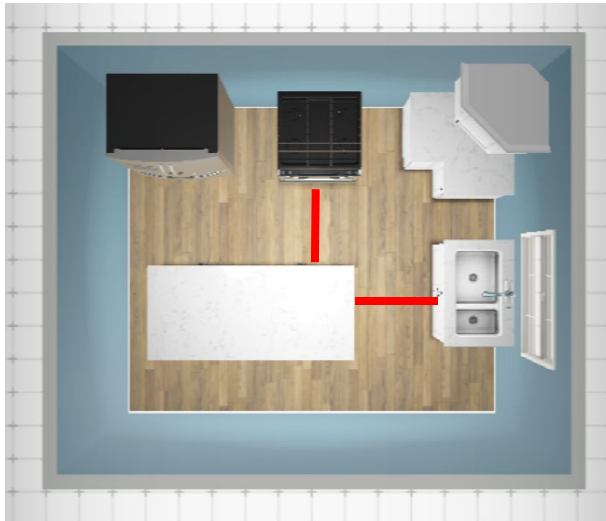

DESIGNING WITH ISLANDS

- Islands can be found under the cabinets tab, and although are fully assembled in the program, must be assembled onsite.
- When designing with islands, be sure to leave a minimum of **36" walking space**.

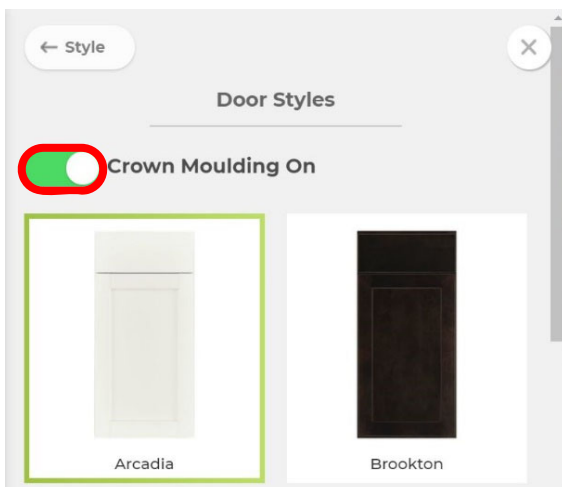

DESIGNING DETAILS

- Crown moulding can be **switched off** under the Style Tab under Door Styles.